

POWERGUARD DPM 20-8

INSTALLATION INSTRUCTIONS

1. Isolate power to the distribution panel by opening the main incoming breaker associated with the relevant existing power meter and verify that the power is indeed switched off.
2. Retract the incoming feeder line to the distribution panel from the main breaker/isolator and reconnect after feeding the wire through the large hole in the enclosed current transformer.
3. Position the DPM 20-8 controller so that the control wires to the RL1 relays can be routed conveniently.
4. Cut the white wire loop from the current transformer to a convenient length and connect to the 'CT 100:1' terminals. It is important that no current flows through the transformer before these wires are terminated.
5. Referring to the enclosed 'DPM20-8 INSTALLATION' diagram, up to eight RL20-1 relays can be controlled from one DPM20-8. The RL20-1 relays in turn can control 8 x 230 Vac line loads not exceeding 4KW resistive or 1 HP inductive and can now be connected according to the diagram allowing no. 8 to control the lowest priority (first to shed) load and no. 1 to serve the highest priority load. Use wire with 2,5mM cross sectional area minimum for the controlled loads. Care should be taken when connecting neutral wires to pair them with the relevant earth leakage or non-earth leakage buss when connecting to the RL20-1 relays.
6. A maximum total current for the board can be programmed on the two rotary switches marked 'SET MAIN MAX. CURRENT'. This setting would typically be the value of the main incoming circuit breaker or isolator. Also set the 'SET S/BY MAX. CURRENT' switches to a value that the standby generator can deliver continuously, de-rating for high altitude installations. These settings can be verified on the LCD display.
7. The two contacts marked 'S/BY' can be short circuited by potential free contacts to switch from main to standby load control setting.
8. 230 Vac can now be connected to the terminals marked '230 VAC INPUT', observing the line and neutral designation. This supply must be protected by an independent 5 amp circuit breaker and taken from the non-earth leakage supply busses. A flashing blue led light indicates power as well as main processor activity.
9. After four to six minutes, provided that there is sufficient power available (approximately 15 Amps), CH1 will switch on. Again, if current reserve allows, CH2 to CH8 will switch on in approximately 1,5 second steps.
10. The LCD display indicates active outputs as well as the total current consumption.
11. As soon as the total current drawn by the distribution board exceeds the value programmed in step no. 7, CH8 contact will open for a minimum of 15 minutes and then restore power to its load as supply becomes available again. Should demand continue to increase during this period, CH7 to CH1 will also shed and after 15 minutes restore the lowest numbers, again depending on availability of power.
12. Blue led lights on the RL1 relays indicate power while green indicates active output to the relevant load.

DPM20-8 INSTALLATION

